

Models: 684-6192 / 684-6199 / 727-1559

Instruction Manual

Important safety instructions: read carefully and keep for future reference

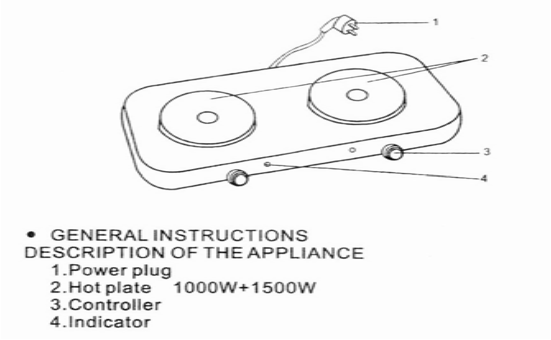

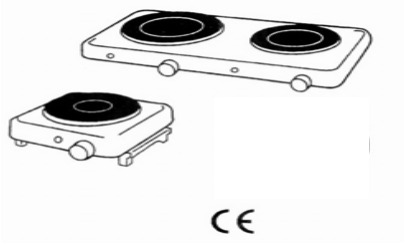

GENERAL SAFETY INSTRUCTIONS

- Please keep instructions and packaging.
- Switch off the hot plate and disconnect from the mains supply whenever the hot plate is not in use or when cleaning.
- Regularly inspect the hot plate and the cable for damage. If there is sign damage of any kind, the hot plate should not be used.
- Repairs to this hot plate should only be performed by a qualified electrician.
- Do not use the hot plate outdoors.
- Under no circumstances should the hot plate be operated in wet or damp conditions.
- Never leave heated oils and fats unsupervised.
- Be careful of cookware protruding beyond the hot plate.
- If liquids are spilt on the hot plates remove from the mains supply and dry.
- Use the hot plate only for the intended purpose of heating and cooking food.
- Use only when cookware is placed on the hot plates.
- Be careful when placing on any heat sensitive surface.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system
- work time should not exceed 60 minutes
- this appliance is not intended for use by persons(including children) with reduced physical, sensory or metal capabilities or lack of experience and knowledge, unless they have been given supervision or introduction concerning use of the appliance by person responsible for their safety,
- children should be supervised to ensure that they do not play with the appliance

USING HOT PLATE

- Before using your hot plate for the **first time**, turn the hot plate to the highest setting for 3 to 5 minutes to condition the Protective coating.

1. Switch “ON” the hot plate by turning the variable temperature control of the hot plate to the selected temperature. When the Indicator light illuminates, the hot plate is in use.
2. Turn the variable temperature control to achieve the desired temperature

POSITION	FUNCTION
0	OFF
1	LOW TEMPERATURE
6	HIGH TEMPERATURE

3. When not in use, make sure the variable temperature control is in the “OFF” position and mains plug is removed from the mains supply.
4. The Indicator Light will switch off when the hot plate reaches the selected temperature.
5. The Indicator Light will switch on again to maintain the desired temperature.
6. Some requirements for the cookware used for cooking.
   a) For the most efficient use of the Hot plate, the cookware used should be with a solid base and be as even as possible, and with a diameter of about 18mm to 20mm, and a maximum quantity of 12 litres.
   b) Cookware with a base diameter smaller than the diameter of the Solid Hot plate should not be used.
   c) Cookware with convex, concave or uneven bottoms should not be used.

CLEANING

- Disconnect the plug from the mains supply when not in use.
- Do not immerse the Hot plate in any liquid.
- Clean the hot plates with a soft, damp cloth and mild detergent.
- Spills on the enamel can be removed with a household cleaner.
- Commercially available hot plate cleaners can use to preserve the natural finish of the hot plate.

STORAGE

- Store the Hot plate after it has cooled down.
- When not in use, store the Hot plate in a safe, dry place, out of reach of children.

SPECIFICATION

	VOLTAGE	TOTAL POWER
684-6199	220-240V 50/60Hz	2500W (1000W + 1500W) 6
684-6192 / 727-1599	220-240V 5 0/60Hz	1500W

- ***Electrical diagram***

